



Order online or call
01905 454 598

Recommended printer settings

	Epson						Canon			HP	
Printer	SP 3880 / 4880 / 7880 / 9880 / 11880 / 7890 / 9890 / R 2880 / R 3000	SP 4900 / 7900 / 9900	SP R800 / 1800 / R 1900	SC P 600 / 800	SC P 7000 / 8000	SP 1500 W	iPF 5000 / 8000 / 9000 / 5100 / 6100 / 8100 / 9100 / 6200 / 8200 6300 / 8300 / 6400 / 8400 / 1000	Pixma Pro 9500 / 1 / 10	Pixma Pro 9000 / 100	Photosmart B9180 / B8850 DJ 2100 / DJ 3100 / DJ 3200 / DJ 5200 / DJ 6100 / DJ 6200 DJ 5400 / DJ 6800	
Ink	Ultrachrome K3 Vivid Magenta	Ultrachrome HDR	Ultrachrome High-Gloss / 2	Ultrachrome HD	Ultrachrome HDX	Claria (Dye)	Lucia / EX / Pro	Lucia	Dye	Vivera	
Metallic Pearl High Gloss Photo Paper 290 (4840)	Mediatype	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	HW Gloss Photo Paper	HW Gloss Photo Paper	Photo Paper Plus Glossy	HP Advanced Photo Paper Glossy	
	Setting	Photo	Photo	Best Photo	Quality	Quality	Photo	Highest	Highest	High	
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	
High Gloss Photo Paper 330 (4841)	Mediatype	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	HW Gloss Photo Paper	HW Gloss Photo Paper	Photo Paper Plus Glossy	HP Advanced Photo Paper Glossy	
	Setting	Photo	Photo	Best Photo	Quality	Quality	Photo	Highest	Highest	High	
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	
Lustre Photo Paper 300 (4844)	Mediatype	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	HW Satin Photo Paper	HW Satin Photo Paper	Photo Paper Plus Semigloss	HP Professional Photopaper Semimatt
	Setting	Best Photo	Best Photo	Best Photo	Quality	Quality	Best Photo	Highest	Highest	High	
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	
Lustre Photo Paper 330 Duo (4845)	Mediatype	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	HW Satin Photo Paper	HW Satin Photo Paper	Photo Paper Plus Semigloss	HP Professional Photopaper Semimatt
	Setting	Best Photo	Best Photo	Best Photo	Quality	Quality	Best Photo	Highest	Highest	High	
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	
Satin Baryta Paper 295 (4846)	Mediatype	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	HW Semigloss Photo Paper	HW Semigloss Photo Paper	Photo Paper Plus Semigloss	HP Advanced Photo Paper Glossy
	Setting	Photo	Photo	Best Photo	Quality	Quality	Best Photo	Highest	Highest	High	
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	
Smooth Matt Cotton Paper 320 (4852)	Mediatype	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Archival Matte Paper	Watercolor Paper	Epson Archival Matte Paper	Photopaper matte	Other FineArt Paper	Fine Art "Photo Rag"	Other FineArt Paper
	Setting	Photo	Photo	Photo	Quality	Quality	Photo	High	High	High	
	Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	
Textured Matt Cotton Paper 320 (4853)	Mediatype	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Velvet Fine Art Paper	Watercolor Paper	Epson Archival Matte Paper	Photopaper matte	Other FineArte Paper	Fine Art "Photo Rag"	Other FineArt Paper
	Setting	Photo	Photo	Photo	Quality	Quality	Photo	High	High	High	
	Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	

PK = Photo Black, MK = Matt Black

Please Note: Settings are only for original printer drivers. If you use our RGB-ICC-Profiles, the settings may be different. Please refer to profile recommendations.

