

# Data Sheet: ERFURT Wallpaper CA

	PVC-free		Hardly flammable		Non-woven adhesive		Wall pasting technique		Breathable	 <b>TEXTILES VERTRAUEN</b> Geprüft auf Schadstoffe nach Oeko-Tex® Standard 100 12.6.13628 Hohenstein Certified Oeko-tex 100 standard product class IV, printed with HP-Latex inks
	Impact-resistant		Excellent light resistance		Dry strippable		Environmentally friendly		Brandschutz-klassifizierung	
	Printable with eco-solvent and solvent inks		Printable with latex inks		Printable with UV-curable inks		For indoor use		For fairs etc.	


## Handling:

**1.** The base surface should be dry, clean, firm, absorbent and smooth. Mark the width of the length on the wall and plumb.



**4.** Firmly press down the lengths of wallpaper with foam rubber roller.

**2a.** Use nonwoven adhesive in a ratio of 1:10 for pasting. Use with a pasting machine – no soaking time required or

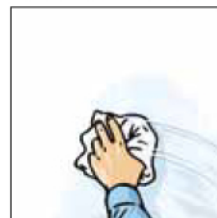

**5.** Immediately after adhesion of each strip, carefully dab with a soft, slightly damp, clean cloth to remove any leaking adhesive.

**2b.** Use the wall adhesion technique – no soaking time required.



**6.** Cut off excess wallpaper in the corners with a wallpapering palette knife and a Stanley knife or using scissors.

**3a.** Where the edges of the print are cut cleanly, butt the edges together, or



**7.** Slight traces of adhesive on the surface can be removed with a soft, slightly damp cloth once the wallpaper has dried.

**3b.** with overlapping lengths of wallpaper, cut the white margins up to the image when dry. Then align the lengths on the wall where they overlap. Make a cut through both layers for a clean join.



**8.** When you come to redecorate, the wallpaper can be dry stripped leaving no traces.