



For More Shining Ideas

EinScan Pro 2X

Multifunctional Handheld 3D Scanner



WWW.PLOT-IT.CO.U


Quick Start Guide

Getting Started with EinScan Pro 2X

Preparation

Device List

Standard Pack

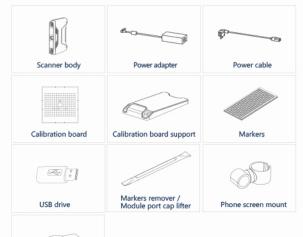

Industrial Pack (optional)

Cable clip



Color Pack (optional)



^{*}Please only use water to clean the calibration board, avoid touching any corrosive liquid.

Preparation

Recommended

OS	Win10, 64bit		
Graphics Card	NVIDIA GTX/RTX series cards , higher or equal to GTX 1080		
Video Memory	>4G		
Processor	17-8700		
Memory	64G		
Interface	high-speed USB 3.0		


Installation

Hardware Installation

1. Standard Pack



Turn on the device and connect it to the computer through USB 3.0 port.

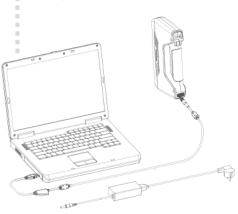

Installation

Hardware Installation

2. Industrial Pack

Fasten the scanner tray onto the tripod and place the scanner on the tray.

STEP 01



STEP 02

Plug the USB cable into the USB port of the turntable and connect it to the computer. Connect the power cable to the turntable.



3. Color Pack

Hold the device upright and remove the USB port cover. The cover is located near the logo on the right side of the device. STEP 01



Insert the Color Pack and lock it with a rotary lever.

O2



4. Operation Environment

Avoid direct sunlight or too bright of light indoors.

Make sure the scanned object and table are stable. (For Fixed Scan)

Software Installation

Software Download

Download the software and user manual from support.shining3d.com or www.einscan.com/software-download

Run the installer STEP

Double click software installation icon to install the software.

.

01



.

License Activation STEP

After successful installation, when the device is correctly connected, double-click to open the software and activate the device. The format of activation is "online activation". Make sure your computer is connected to the

02

Online Activation

.

Or do local activation and find the license in the USB drive.

Local Activation

.

Attention: If you install another device of different serial number, the software will automatically notify users to activate this device.

Online Activation

Local Activation

Calibration

Camera Calibration

tion on the

Follow the instruction on the software to place the calibration board in 5 different positions. Hold the scanner vertically and cover the screen range.












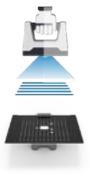





...................

STEP 05

Calibration



White Balance Calibration


Only required for Color Pack

Hold the scanner vertically to the back side of calibration board (white) and adjust the distance until you find the proper distance.

The first time installing the software, calibration is required by default. Calibration is also required for the following:


- 1.Device Change
- 2.After device enduring bumpy transportation
- 3.After device accuracy decreases
- 4.Device being uncalibrated for a long time, for example, 15 days.
- 5. When using the Color Pack, the texture camera's position has been changed.

Fixed Scan

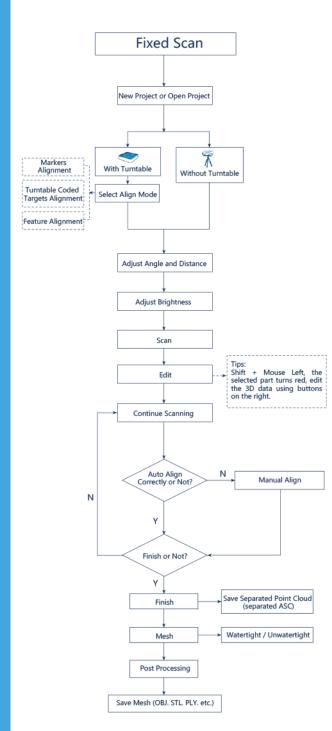


Handheld HD Scan



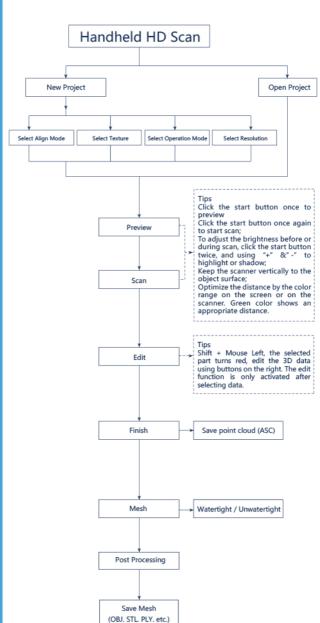

Handheld Rapid Scan



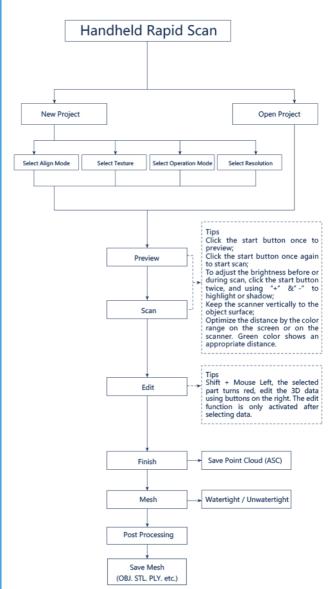

Scanning Tips

Scan Mode Selection

Use Handheld Rapid Scan mode when:

A fast scanning experience is needed;

Objects with good geometry for feature alignment;

Objects are hard to move or too big to stay on turntable for scanning. Use Handheld HD Scan mode when:

High accuracy and high resolution by handheld scanning is required;

Objects are hard to move or too big to stay on turntable for scanning.

Use Fixed Scan with Turntable mode when:

High accuracy and high resolution is required;

Objects' footprint within 150mm which may not cover most coded targets on turntable;

Weight under 5kg;

Objects' footprint above 150mm with rich geometry features can also work in Fixed Scan with Turntable mode through feature alignment.

Use Fixed Scan without Turntable mode when:

High accuracy and high resolution is required;

Objects is too big or heavy to work on turntable.

Summary

Mode	Accuracy (mm)	Scan Efficiency	Resolution Point distan (mm)	
Fixed Scan	Single Shot Accuracy 0.04	Single Scan < 0.5s	0.16	Turntable Coded Targets, Feature, Markers, Manual
with Turntable	ជាជាជាជាជាជាជាជាជាជាជាជាជាជាជាជាជាជាជា	ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ ነ	ជាជាជាជាជាជា	
Fixed Scan	Single Shot Accuracy 0.04	Single Scan < 0.5s	0.16	Feature, Markers, Manual
without Turntable ជាជាជាជា		ជាជាជាជាជា	ជាជាជាជាជាជា	
Handheld HD Scan (n	Up to 0.045 +0.3 mm/m (markers alignment)	10 fps 3,000,000 points/s	0.2-2	Markers, Feature (with rich geometrical features on the surface),
	ជាជាជាជា	ជាជាជា	<u> ಬಿಬಿಬಿಬಿ</u>	Hybrid(Markers and Feature)
Handheld Rapid Scan	Up to 0.1 +0.3 mm/m (markers alignment) ☆☆☆	30 fps 1,500,000 points/s	0.2-2 ක්ක්ක්	Markers, Feature (with rich geometrical features on the surface), Hybrid(Markers and Feature) Texture (with rich texture)



Difficult to Scan

- Transparent objects like glasses
- · Shining or highly reflective objects like mirrors



Solution

Spray with white powder



Not Recommended

- Moving objects or vibrating objects
- Lattice structure with many small deep holes
- · Hairy objects like human hair and fur



Technical Support

Register at support.shining3d.com for support or contact through:

Email: einscan_support@shining3d.com Skype: einscan_support

For more videos of the scanners, please follow our YouTube channel "SHINING 3D"

APAC Headquarters

SHINING 3D Tech. Co., Ltd.
Hangzhou, China
P: +86-571-82999050
Email: sales@shining3d.com
No. 1398, Xiangbin Road, Wenyan,
Xiaoshan,Hangzhou, Zhejiang, China,
311258

Americas Region

SHINING 3D Technology Inc. San Francisco, United States P: +1415-259-4787 Email: sales@shining3d.com 1740 César Chávez St. Unit D. San Francisco, CA 94124

EMEA Region

SHINING 3D Technology GmbH. Stuttgart, Germany P: +49-711-28444089 Email: sales@shining3d.com Breitwiesenstraße 28, 70565, Stuttgart, Germany